


Wobl+™

Instructions • Instruktioner • Instructions
Anweisungen • Istruzioni • Instrucciones
woblwatch.com

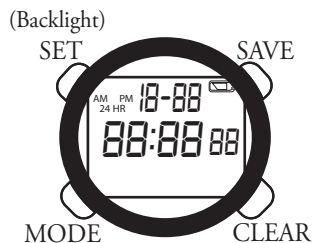

Features

- Time/Date
- Sound vibration
- Stopwatch
- Lock
- Countdown timer
- Backlight
- 9 alarms
- 10 ATM Water-resistant



<h3>Time/Date</h3> <ol style="list-style-type: none"> 1. MODE Hold 3 secs 2. SET 3. SAVE <p>SET → Select AM, PM, or 24HR → SAVE SET → Select hour → SAVE SET → Select minute → SAVE SET → Select year → SAVE SET → Select month → SAVE SET → Select day → SAVE</p>	<h3>Countdown Timer</h3> <ol style="list-style-type: none"> 1. MODE Press 2 times 2. MODE Hold 3 secs 3. SET 4. SAVE <p>SET → Select start hour → SAVE SET → Select start minute → SAVE SET → Select stop hour → SAVE SET → Select stop minute → SAVE SET → Select interval hour → SAVE SET → Select interval minute → SAVE SET → Select sound & vibration → SAVE</p>
<h3>Stopwatch</h3> <ol style="list-style-type: none"> 1. MODE Press 1 time 2. SET to start/stop 3. CLEAR to clear 	<h3>Erase countdown</h3> <ol style="list-style-type: none"> 1. MODE Press 2 times 2. MODE Hold 3 secs 3. CLEAR
<h3>Lock</h3> <p>(Prevents re-programming, only backlight functions while locked)</p> <ol style="list-style-type: none"> 1. Time/Date screen 2. Hold SET & SAVE 3 secs = lock 3. Hold SET & SAVE 3 secs = unlock 	<h3>Alarms</h3> <ol style="list-style-type: none"> 1. MODE Press 3 times 2. MODE Hold 3 secs 3. SET 4. SAVE <p>SET → Select alarm 1-9 → SAVE SET → Select hour → SAVE SET → Select minute → SAVE SET → Select sound & vibration → SAVE *Repeat steps to set multiple alarms*</p> <h3>Erase alarms</h3> <ol style="list-style-type: none"> 1. MODE Press 3 times 2. MODE Hold 3 secs 3. CLEAR Press to erase alarm Hold to erase all

Limited Warranty

Your watch is guaranteed against defects for a period of 6 months from the date of purchase. The guarantee does not cover damage through accident, negligence, or misuse. This guarantee does not affect your statutory rights. Knoxwatches/PMD IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Not covered by warranty: 1. Batteries, straps, and display screen. 2. Damage caused by accident, misuse, incorrect battery replacement, or lack of care. Your watch is water-resistant up to 10 ATM and can withstand activities such as swimming, bathing, & handwashing. Your watch should not be used for deep sea diving or in hot water. Do not press the watch buttons while underwater. If your watch requires attention under the terms of the warranty, please mail in the watch with proof of purchase and a brief note to explain the fault to the address listed. Do not send the watch packaging materials if claiming a faulty watch. If the watch is determined to be faulty within 6 months of purchase, Knoxwatches/PMD will replace the watch free of charge but will not refund shipping or any other expenses. If the watch is determined to be functional and without defect, then it will be returned to the customer. Knoxwatches/PMD will not refund monies for any watch that is worn or shows any wear or damage.

Battery Instructions

<h3>1</h3> <p>Remove the screws.</p>	<h3>2</h3> <p>Remove the case back from the watch case.</p>	<h3>3</h3> <p>Remove old battery and replace with new (+ positive side up).</p>	<h3>4</h3> <p>Replace the screws.</p>
--------------------------------------	---	---	---------------------------------------